GB **MBI 710 S**

QUICK REFERENCE GUIDE

CONTROL PANEL

Multifunction knob
Turn to select a desired function:
Timer
Microwaves
Grill
Grill Combi
Turbo Grill Combi
Forced Air
Forced Air Combi
Quick Heat
Auto functions

Auto button
Press to select one of the autofunctions:
Jet defrost
Auto reheat
Auto Cook
Auto Forced Air Combi

Digital display
The display includes a 24-hour clock and indicator symbols.

Selector Indicator lights
These indicates which selection you are currently working with.

+/- knob
Turn to set value of:
Time
Weight
Doneness

Jet Start button.
Use to start the cooking process or invoke the Jet Start function.

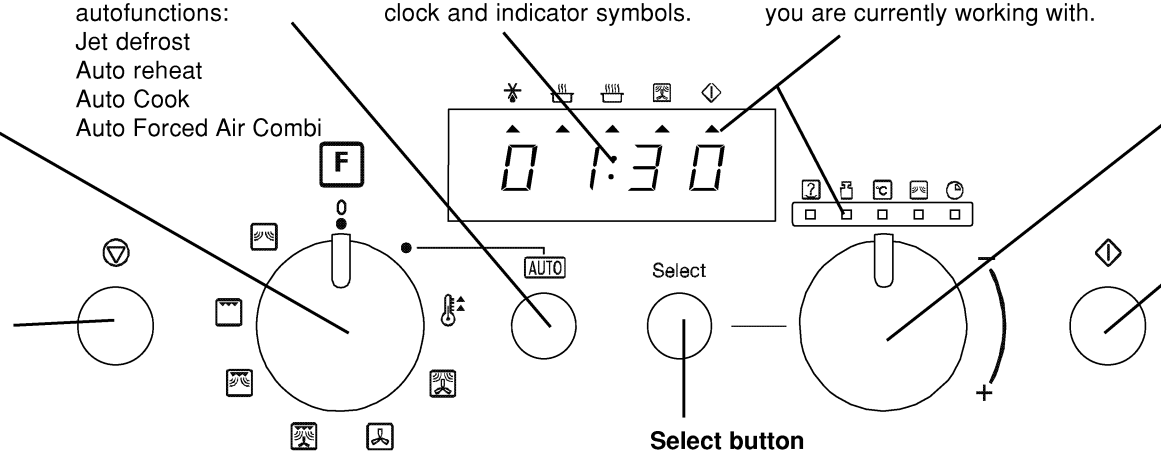

Stop button.
Press shortly to stop or reset any of the oven functions.

Select button
Press to select setting:
Weight
Time
Microwave power level

CHOOSING MICROWAVE POWER

MICROWAVES ONLY

Level		To be used for:
JET / 900 W		Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W		Cooking of vegetables, fish, meat etc.
650 W		Cooking dishes, not possible to stir.
500 W		More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W		Simmering stews, melting butter.
160 W	✳	Defrosting.
90 W		Softening butter, cheese and ice cream.
0 W		Setting the standing time.

GRILL COMBI / TURBO GRILL

Level	To be used for:
90 - 160 W	Fish, fruit
160 - 350 W	Vegetables, gratins

FORCED AIR

Level	To be used for:
90 - 160 W	Roasts, cakes
160 - 350 W	Lasagne, poultry

MANUAL DEFROSTING

This function is used for defrosting food not included in the Jet defrost function.
Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting manually.

JET START FUNCTION

This function is used for quick reheating of food with a high water content such as; clear soups, coffe or tea.
Press to automatically start with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with ½ min. You may also alter the time by turning the Adjust knob to increase or decrease the time.
This button also works as a normal start button after setting a function.

NOTE: Never operate the oven empty when using microwaves

GB **MBI 710 S**

QUICK REFERENCE GUIDE

AUTO FUNCTIONS

QUICK GUIDE

1. **Turn** the multifunction knob to the Auto position.
2. **Press** the Auto button to select the desired auto function.
3. **Turn** the +/- knob to choose desired food class.
4. **Press** the Select button (default weight is displayed).
5. **Turn** the +/- knob to set the weight of the food.
6. **Press** the Start button.

Midway thru the process, the oven may STOP and prompt you to "TURN or STIR FOOD":
— Don't use the stop button!
— Just open the door and turn the food.
— Close, and restart with the Jet Start button.

Automatic but less perfect results:
If you do not turn the food when the oven prompts you to do so, the oven will AUTOMATICALLY RESTART after 1 minute. The oven then completes the process. The time will be longer in this case and the result will be less perfect, than it would have been if you had turned the food when prompted to do so.

AUTO JET DEFROST

Use this function for defrosting ONLY. Jet Defrost can only be used for very fast defrosting of frozen food belonging to the categories listed here. Use manual defrost for other food or weights not listed.

PLEASE NOTICE
To achieve perfect results it is NECESSARY to:
— Input, with the max. possible precision, the WEIGHT of the food selected.
— Turn the food when the oven prompts you to do so.

1 MEAT
(100 g - 2 Kg)

2 POULTRY
(100 g - 3 Kg)

3 FISH
(100 g - 2 Kg)

4 VEGETABLES
(100 g - 2 Kg)

5 BREAD
(100 g - 2 Kg)

AUTO AUTO REHEAT

Use this function when reheating readymade food or milk. Auto Reheat can be used for food belonging to the categories listed here.

PLEASE NOTICE
During the heating process the oven may stop and prompt you to "STIR" food.

1 DINNER PLATE
(250 g - 600 g)

2 SOUP
(200 g - 800 g)

3 FROZEN PORTION
(250 g - 600 g)

4 MILK
(100 g - 500 g)

5 CASSEROLE
(200 g - 800 g)

NOTE: Never operate the oven empty when using microwaves

AUTO AUTO COOK

Use this function for cooking ONLY. Auto Cook can only be used for food belonging to the categories listed here. Use "Cook & Reheat with microwaves" for other food or weights not listed.

PLEASE NOTICE
During the cooking process the oven may stop (depending on program) and prompt you to "TURN or STIR" food.

1 BAKED POTATOES
(200 g - 1 Kg)

2 FRESH VEGETABLES
(200 g - 800 g)

5 POPCORN
(90 g - 100 g)

3 FROZEN VEGETABLES
(200 g - 800 g)

4 CANNED VEGETABLES
(200 g - 600 g)

AUTO AUTO FORCED AIR COMBI

Use this function for cooking from raw or frozen. Auto Forced Air Combi can only be used for food belonging to the categories listed here. Use "Forced air or Forced air & microwaves" for other food or weights not listed.

PLEASE NOTICE
After the PRE-HEATING process the oven will stop and prompt you to "ADD" food.

1 CHICKEN
(800 g - 1½ Kg)

2 FROZEN LASAGNE
(400 g - 1 Kg)

5 FROZEN ROLLS

3 COOKIES

4 CANNED BREAD DOUGH

GRILL

Use this function when cooking:
- Cheese toast & Hot sandwich
- Sausages
- Grill spit
- Pommes Duchesse
- Gratinated fruit

GRILL COMBI

Use this function when cooking:
- Potato gratin
- Fish gratin
- Lasagne

TURBO GRILL COMBI

Use this function when cooking:
- Chicken pieces
- Stuffed vegetables
- Baked potatoes

TECHNICAL SPECIFICATION

Supply voltage	230 V/50 Hz
Rated Power Input	2800 W
Fuse	16 A (UK 13 A)
MW output power	900 W
Grill	1600 W
FA	1200 W
	H x W x D
Outer dimensions:	455 x 595 x 560
Oven compartment:	210 x 450 x 420

4619 694 47301